

Moreflex

Characteristics:

- ↓ Moreflex is a premium grade, Rubber modified, flexible off white cement based tile adhesive.
- ↓ It is designed for bonding all types of ceramic, stone and mosaic tiles, with the exception of light coloured and Green Marble, onto a variety of substrates like concrete, render, rendered brickwork, block work, Gyprock, plasterboard, fibre cement and particle board surfaces.
- ↓ It can be used internally or externally on wall and floor surfaces.
- ↓ Moreflex can be used for fixing low porosity tiles.
- ↓ Moreflex can be used to fix tiles over most acrylic waterproofing membranes. However it is advisable to contact the manufacturer prior to commencing.
- ↓ Moreflex is a non-slump tile adhesive designed to be used for fixing of large floor tiles
- ↓ Moreflex has been tested in accordance with Australian Standards and passes its requirements.

Preparation:

- ↓ Ensure all concrete slabs are allowed to cure for at least 6 weeks in accordance with AS 3958.1-1991 and have a wood float finish.
- ↓ All rendered surfaces must be allowed to cure for at least 7 days prior to commencing tiling.
- ↓ The maximum variation in the plane of the concrete must not exceed 5mm in 3 meters for floors and 4mm in 2 meters for walls.
- ↓ Steel trowelled finished concrete surfaces **Must** be mechanically or chemically abraded prior to commencing tiling
- ↓ Structural Particle Board used as a flooring material must be a minimum of 19mm thick and fixed in accordance with the manufacturer's instructions and the relevant standards.
- ↓ Fibre Cement sheet when used as an underlay or wall / floor material must be a minimum of 6mm in thickness. For heavy duty commercial applications it should be a minimum of 9mm thick and all should be fixed in accordance with the manufacturer's instructions and the relevant standards.
- ↓ Compressed Fibre-Cement sheets when used as a floor substrate must be 15mm thick, and when used a wall substrate must 9mm thick and must be installed in accordance with the manufacturer's instructions and the relevant standards.
- ↓ Gypsum -plasterboard sheets when used as a wall substrate must be a minimum of 10mm thick, and installed in accordance with the manufacturer's instructions and the relevant standards.
- ↓ Ensure all surfaces are sound, dry and free from excessive movement, oil, dust, grease, wax, curing compounds, release agents and any other loose contaminating materials.
- ↓ It is recommended that all surfaces must be primed with Uniprime, especially porous surfaces, to ensure a sound bond of the adhesive to the substrate.
- ↓ When applying the primer onto a floor surface it is recommended to firstly pour some primer in a section then spread the primer using a broom, brush or roller. Then continue this method of application until the entire area is primed. **Note:** This method of application ensures a thorough coat of the primer on the surface.
- ↓ Allow the primer to dry for approximately 5 minutes at 20°C prior to commencing tiling.

Expansion / Movement Joints

Expansion / movement joints must be provided to allow for movement between adjacent building components. They should be as follows:

- ↓ Over Existing joints in the substrate.
- ↓ Where two different substrates meet. Eg: Timber and Concrete.
- ↓ Around fixed elements in the floor eg. Columns.
- ↓ At internal vertical corners.
- ↓ Around the perimeter of the floor.
- ↓ In internal floors where any dimension exceeds 9m or 6m if subjected to sunlight.
- ↓ In external floors where any dimension exceeds 4.5 m.
- ↓ On wall surfaces at storey heights horizontally and approximately 3m-4.5m apart vertically. Ideally they should be located over movement joints in the structural background and at structural material changes for example the horizontal joint at the bottom of floor slabs, vertical joints at internal vertical corners, and at junctions with columns. (The above points are in accordance with AS3958.1-1991)
- ↓ Movement joints should go right through the tile adhesive bed to the background and kept free from dirt and adhesive droppings. Movement joints must not be less than 6mm and not wider than 10mm. The movement joints must be filled with a flexible sealant like Silicone.

Mixing:

- ↓ The mixing ratio of Moreflex is 20kg of powder to 8 Litres of water.
- ↓ Pour 8 litres of clean water into a drum and then gradually add the Moreflex while mixing continuously until a smooth lump free mix is obtained. Always add powder to liquid.
- ↓ Allow the mix to stand for 5 minutes, re-stir and then apply the adhesive onto the substrate.

RLA POLYMERS PTY LTD

ACN 004 709 915

Australia

215 Colchester Road, Kilsyth
Victoria 3137, Australia

PO Box 147, Kilsyth
Victoria 3137, Australia

Telephone (03) 9728 1644
Facsimile (03) 9728 6009
Email: info@riapolymers.com.au

Queensland

25 Computer Rd.
Yatala QLD 4207
Telephone (07) 3807 4022
Facsimile (07) 3807 4755

New South Wales

138 Hassall St.
Wetherill Park
NSW 2164
Telephone (02) 9609 4755
Facsimile (02) 9604 3199

New Zealand

68 Dalgely Drive, Manukau City
Auckland, New Zealand

PO Box 97-575, Manukau City
Auckland, New Zealand

Telephone (9) 268 0301
Facsimile (9) 268 0305

Malaysia


No 5, Lebuhraya Petai, Pandamaran
42000 Port Klang, Selangor D.E.

Telephone 03-31661039
Facsimile 03-31661037

 A British Vita Group Company



The information supplied is to the best of our knowledge true and accurate. The actual application of the product is beyond the manufacturer's control. Any failure or damage caused by the incorrect usage of the product is not the responsibility of the manufacturer. The manufacturer insists that all workmanship must be carried out in accordance with AS3958.1-1991. It is also the responsibility of the end user to ensure that the literature in their possession is the latest issue.

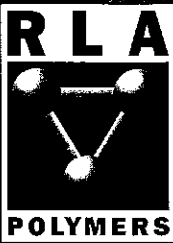

SOLUTIONS FOR INDUSTRY

Application:

- ✦ Once the surface has been appropriately prepared in accordance with the above instructions then apply the adhesive onto the substrate using an appropriate notched trowel.
- ✦ For floor tiling use a 10mm x 10mm square notched trowel for tiles up to 300mm x 300mm. For tiles 300mm x 300mm and larger use a 12mm x 12mm square notched trowel. For mosaic tiles use a 6mm x 6mm square notched trowel.
- ✦ For wall tiling use 6mm x 6mm square notched trowel for tiles up to 200mm x 200mm. For tiles larger than 200mm x 250mm use an 8mm x 8mm or 10mm x 10mm square notched trowel.
- ✦ Moreflex should be applied onto the substrate at a rate of 1m² at a time. Application rates greater than this can result in the adhesive skinning before the tiles are laid into it.
- ✦ Once the adhesive is applied onto the substrate ensure that it does not skin prior to bedding the tiles into it. Once the adhesive skins do not lay tiles into it, but remove it and apply fresh adhesive.
- ✦ When placing the tiles into the adhesive press them in by using a twisting or sliding action. Ensure no voids occur and full coverage of adhesive is under the tiles.
- ✦ For tiles with lugs, grooves or uneven backing it may be required to butter the back of the tile with adhesive in addition to trowelling the adhesive onto the substrate.
- ✦ The final bed thickness of the adhesive should be at least 2mm for wall tiling and 3mm for floor tiling.
- ✦ Once the tiling is completed do not disturb the tiled surface for at least 24 hours at 20°C.

Clean Up:

- ✦ Excess adhesive from the face of the tiles can be cleaned up with damp cloth while the adhesive is still wet.
- ✦ Adhesive that has oozed out into the grout joint must be raked out with a knife / spatula etc.
- ✦ Tools and other equipment can be cleaned up using water while the adhesive is still wet.

Coverage:

- ✦ A 20kg bag of Moreflex will cover approximately 20 m² using a 6mm notched trowel.

Grouting Application:

- ✦ Grouting application can commence 24 hours after the completion of tiling.
- ✦ Refer to RLA/Atlas grout data sheets for all technical information.

Packaging / Shelf Life:

- ✦ Moreflex is available in 20kg bags.
- ✦ A bag of Moreflex, when stored in a cool, dry environment, and is stored above ground level, will have a shelf life of approximately 12 months.

Handy Tips:

- ✦ Do not apply Moreflex in temperatures above 40°C and below 5°C.
- ✦ Moreflex cannot be used for fixing tiles directly onto timber floors.
- ✦ Moreflex cannot be used for fixing tiles in permanently immersed situations like swimming pools, spas etc and permanently damp concrete slabs like those present around the pool surrounds etc.
- ✦ For applications / situations not mentioned in this data sheet please contact your nearest RLA /Atlas office.
- ✦ Moreflex being cement based is alkaline in nature, and therefore may cause dermatitis. It is recommended that applicators wear PVC gloves or similar and safety goggles.
- ✦ For a full MSDS on this product please contact your nearest RLA /Atlas office.

Technical Data:

Properties	Results
Appearance	Off white Powder
Bulk Density	1.18 +/- 0.05
Open Time	Approx. 20 minutes @ 20°C
Drying Time @ 20°C	Approx. 24 hours
Shear Strength after 7 days	1.87 MPa
Shear Strength after 14 days	2.14 MPa
Modulus of Elasticity	0.46 MPa
Pot life	45 minutes @ 20°C

The information supplied is to the best of our knowledge true and accurate. The actual application of the product is beyond the manufacturer's control. Any failure or damage caused by the incorrect usage of the product is not the responsibility of the manufacturer. The manufacturer insists that all workmanship must be carried out in accordance with AS 3958.1-1991. It is also the responsibility of the end user to ensure that the literature in their possession is the latest issue.